



Gira Intercom with xxter

xxter b.v.
Elandsgracht 73 I
1016 TR Amsterdam
The Netherlands
Tel. +31 20 6242 865
www.xxter.com
info@xxter.com

This document describes how to set up xxter in combination with a Gira intercom system. At this moment, only audio is supported.

The installation of the components and wiring is not described, this can be found in the appropriate manuals.

First this manual explains what needs to be configured in the Gira system, step-by-step. Then the configuration within the xxter system is described.

The Gira intercom system should at least contain the following components:

- A system module (audio or video)
- A doorstation
- The TKS-IP gateway, which requires a separate power supply. The configuration of the TKS-IP gateway should be started within 30 minutes of the gateway starting up. If the gateway has already started, disconnect the power as well as the interconnection with the other components or disconnect the power of the system component

In this configuration a homestation is also described, but not required

When an asterisk(*) is shown in this manual, this redirects to the last page of the manual. On that page you can write down the appropriate settings you use and use that later on when setting up the xxter device.



Setting up the TKS-IP gateway

- 1) Enter the IP-address of the TKS-IP gateway in a browser *1
- 2) Create an administrator account or log on with a previous made administrator account. *2 & *3

Set up system

Select language
Choose your language English (GB)

Please set the access data for the DCS-IP-gateway.

Administrator name admin *

Password * Please enter password.

Repeat password *

Start set up ▶

- 3) Determine the scope of the system:
 - Gira door station (required)
 - Gira DCS Communicator (required)
Check "Facilitate calls from DCS Communicator to door stations"
 - Gira home station (optional)
 - IP-telephone (required)Optionally, select any additional option of the installation that is used.

< Overview Determine scope of the system

Which components and functions should be used?

- Gira door station
- Gira DCS Communicator
 - Use individual ringing tones
 - Use Skype™ forwarding
 - Facilitate calls from DCS Communicator to home stations
 - Facilitate calls from DCS Communicator to door stations
 - Apply access rights for cameras (What does that mean?)
- Gira home station
 - Trigger Gira switching actuators from the DCS-IP-gateway
 - Gira DCS-TC-gateway
 - Gira DCS-camera-gateway
 - IP camera
 - IP telephone
 - Gira HomeServer/FacilityServer
 - Use more than one DCS-IP-gateway

Save Next

Click Save and Next

4) Select “Create call buttons - Start Gira assistant”



- Press the system program button of the installation for at least 3 seconds
- Next, press all the door call buttons, each also for at least 3 seconds. A loud tone confirms the success of learning the button.
- Afterwards every button should be listed on the page:

Teach-in sequence ↓	Component ↑	Designation	Button	Designation in DCS Communicator
1	Surface-mounted/flush-mounted door station	Front door	Button 1	Front door Button 1

- Change the name of the door station to something logical as well as all the buttons, for easy identification.

Press Save and Finish

5) Select “Configure analog cameras – Start Gira Assistant”
(for video systems only)


The camera will appear and you can change specific settings if required.

Press Save and Finish



6) Select “Configure DCS Communicator – Start Gira Assistant”


- Click on “Add new DCS Communicator”
- Change the name to **xxter**
- Change the username to **xxter** (for example) *4
- Enter a password and confirm the password *5
- Select **NO** call buttons at the “Calls (incoming)” tab
- Select the “Door calls (outgoing)” tab and drag the door station to the right side of the panel.

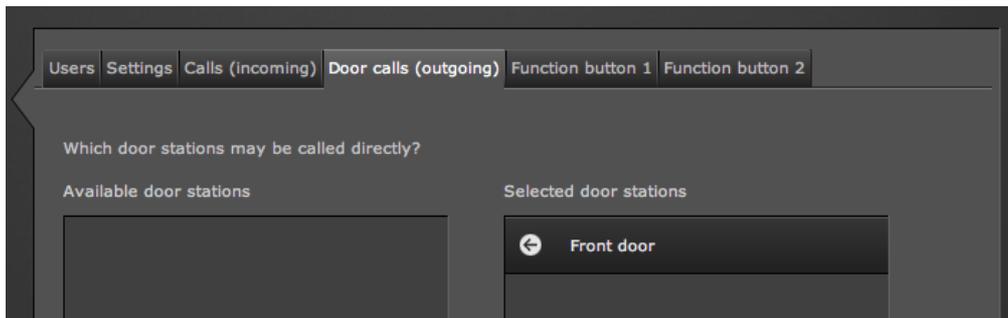

- The function buttons are not used
- Press Save and Finish

7) Select “Configure IP telephones – Start Gira assistant”

- Click on “Add new IP telephone”
- Change the name to **xxterbox** (for example) *6
- Change the user to 101 or another number *7
- Enter a password and confirm the password
- Check the “I have read the safety instructions” checkbox.
- Select the “Calls (incoming)” tab and check the box of the corresponding button. When you would like to use multiple buttons, you can add more users and select the buttons to the corresponding users.
- Press Save and Finish

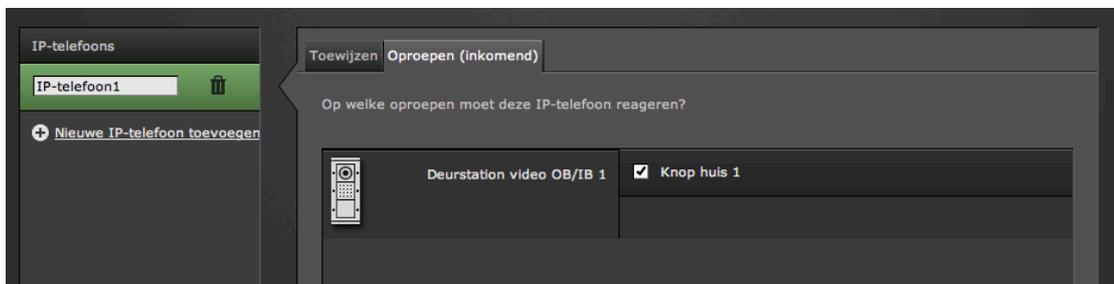

8) Click “Finish configuration”

The configuration of the Gira TKS-IP gateway is now completed.



The configuration of xxter

- 1) The information used to configure the TKS-IP gateway can easily be used to fill-in the required parts of the xxter project, under cameras.

Name	<input type="text" value="Gira"/>	
Type	<input type="text" value="Gira intercom (audio)"/>	
IP address	<input type="text" value="192.168.76.92"/>	*1
DCS username	<input type="text" value="xxter"/>	*4
DCS password	<input type="password" value="....."/>	*5
SIP username	<input type="text" value="101"/>	*6
SIP password	<input type="password" value="....."/>	*7
Door button number	<input type="text" value="1"/>	
External IP	<input type="text"/>	
STUN server	<input type="text"/>	

Normally, you can use door button number 1. When using multiple buttons, select the correct door button. The external IP and STUN server can be left empty for the moment.

- 2) Add the intercom to a page on the corresponding profile. (End-user account)
- 3) Add an alert service to the profile and select the mobile devices on which you would like to receive the alert. Change the text to “Intercom front door”, for example.

Name:	<input type="text" value="Intercom GIRA"/>	<input type="button" value="Delete"/>
Message:	<input type="text" value="Intercom [d] / [t]"/>	[x] = value, [d]/[D] = date, [t]/[T] = time
Max. 1 message every:	<input type="text" value="1 minute"/>	
Type	To	
<input type="text" value="Push notification"/>	<input type="text" value="GT-P5110 - info"/>	<input type="text" value="Go to Algemeen"/>
		<input type="text" value="Activate intercom (if present)"/>
		<input type="text" value="Default sound"/>
Email	<input type="text"/>	

- 4) Reload the latest configuration into your xxter (through the web configuration of your xxter device)



- 5) On the trigger page, add a new trigger, and select SIP trigger. Enter the number you selected as the SIP username (see *6)
- 6) Select the newly created alert service and save the trigger.

After reloading the profile in the app, the door button should trigger the alert service. Then you should be able to make a call to the intercom.

Notes:

The xxter device and the TKS-IP should be connected to the same network.

The Gira intercom can also be used through the Internet, by using port-forwarding and a STUN-server (free servers are available on the Internet). This is not described in this manual, because the settings and configuration is depending on many external factors, like the used router, network configuration and operator. Ask the network specialist for more information or search the Internet for more documentation.

*1 IP-address TKS-IP gateway: _____

*2 Admin username:
(not used in xxter) _____

*3 Admin password:
(not used in xxter) _____

*4 Username DCS communicator login: _____

*5 Password DCS communicator login: _____

*6 Username SIP telephone login: _____

*7 Password SIP telephone login: _____